

Rapid Shot

Manual

USER MANUAL
RAPIDSHOT
GAMEPAD CHARGING STATION



Please read and follow the instructions carefully


This appliance is intended for home use or other non-commercial purposes. The manufacturer is not responsible for damages resulting from improper use or use other than that for which it was intended.

Technical data

- The charging station is compatible with DualSense controllers for the PlayStation 5 console
- Input voltage: 5V / 2A
- Output voltage: 5.4V 800mA x2

Device description

1. Controller charging ports
2. USB-C connector
3. USB to USB-C cable
4. Charging indicators

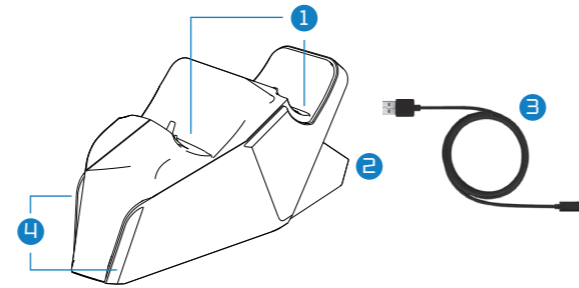

Installation and first start-up

Connect the USB-C cable to the charging station port and the other end of the cable to a 5V / 2A AC adapter.

After connecting the charging station to a power source, the diodes will light up red and then blue.


The charging station is ready to charge.

Gently place the controller in the charging station.

After the controller is positioned correctly, the diodes will light up red.

This is a signal that the controller is placed correctly and charging has started.

Once the controller is fully charged, the charging station indicator will turn blue.

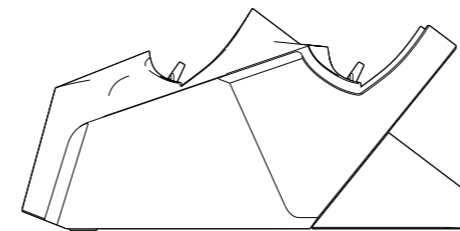

Cleaning

1. Unplug the charging station.
2. Wipe the charging station with a soft, slightly damp cloth.

Safety and hazard conditions

1. The device is intended for charging controllers.
2. The device is not intended for industrial or laboratory use.
3. Do not immerse the device in water or other liquids.
4. The device can only be used at room temperature. Do not expose the product to harmful weather conditions.
5. Do not start the device if the power cord is damaged.
6. This equipment can be used by children aged 8 years or older. Children should not clean or maintain the equipment without supervision.
7. Do not place or store the device in a place where it can fall or be pulled into a bathtub or sink.
8. Do not use the device while bathing in a bathtub or shower, as this may cause electric shock.
9. After each use or in the event of a fault, the device must be disconnected from the power supply.
10. Do not use the power cord to carry the device.
11. Do not touch the power cord, accessories or the device with hot tools. The power cord must not come into direct contact with hot parts of the device.
12. Do not place the device or its accessories on unstable or hot surfaces or near heat sources.
13. The temperature on the surface of the device may be high during operation. Do not place foreign objects such as metal objects, magnets or magnetic stripe cards between the device being charged and the charger. The portable device may not charge properly or may be damaged by overheating.